
# ENMAX

Power Quality
Specifications and
Guidelines for
Customers

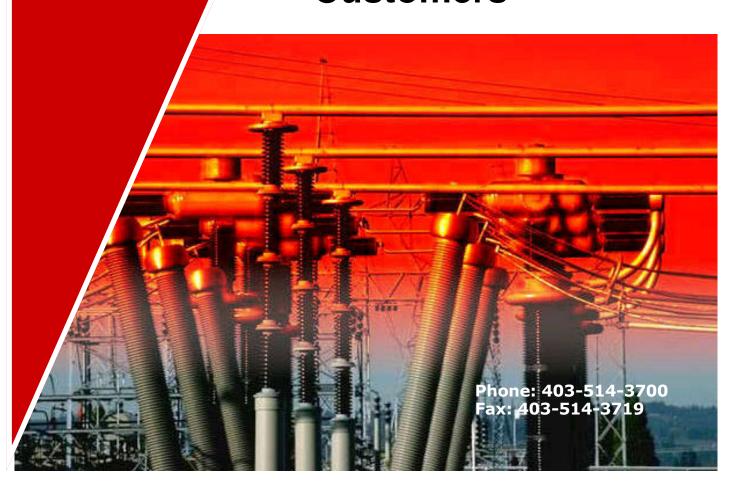

GENERAL OVERVIEW

•

### 1.1 WHAT DOES THIS SPECIFICATION MEAN

ue to the increase in harmonic loads, utilities across Canada are implementing power quality limits to protect customer and utility equipment.

The purpose of this document is to explain the harmonic limits and voltage flicker limits the customer must meet, the commissioning process for the specification, and the procedure that takes place to mitigate customer complaints. The limits that are described in this document reflect industry standards.

#### 1.2 ADHERING TO THE GUIDELINES

To maintain a high quality of electrical utility service, all new customers and all existing customers connected to the ENMAX power system are required to adhere to the specifications and guidelines in this document. If a customer exceeds these limits it is probable that the customer will have to be disconnected from the ENMAX power system. The conditions that determine whether a customer will be connected are listed below. The criterion for stage 1 and stage 2 are outlined in Section 3. ENMAX Power will be able to connect the customer if the customer has:

- · completed all steps in stage one.
- · completed all steps in stage two.
- does not produce harmonics and does not have to be evaluated under any of the stages of acceptance.

The customer cannot be connected to the power system if the customer has been:

rejected under any of the stages.

A customer may be disconnected from the power system if:

- the customer exceeds the limits described in the specifications; and
- other customers and/or utility equipment is being adversely affected.

### 1.3 WHAT IS THE CONNECTION PROCESS?

Found below is a brief description of the stages of the process that harmonic producing customers must follow in order to be connected to the ENMAX power system. A detailed description of this process is found in Section 3.

- Step 1: A new customer, consultant, or Energy Service Provider contacts a Planner at ENMAX Power for connection of a new service or an upgrade.
- Step 2: The planner gives the customer, consultant, or Energy Service Provider the power quality specifications and informs the engineer that a customer has been given the document.
- Step 3: The engineer contacts the customer and the two parties discuss the customer's operation and the specifications.
- Step 4: If required, the engineer administers the specifications.
- Step 5: The customer submits a report which demonstrates that it will adhere to the specifications.
- Step 6: The engineer reviews the report and confirms all electrical utility standards are met.
- Step 7: The customer is connected to the power system.

Power Quality Limits

1

# 2.1 HARMONIC CURRENT DISTORTION LIMITS

Il of the ENMAX customers that are connected to the ENMAX Power distribution and network systems are responsible for complying with the harmonic current limits, at the point of common coupling, that have been stipulated by ENMAX Power Corporation.

The current harmonics created by the customer cannot exceed the limits that are outlined in Tables 2.1 and 2.2, at the point of common connection (PCC). These limits are applied to each phase current individually and are expressed as a percentage of the customer's maximum demand load current.

Table 2.1 Harmonic Current Distortion Limits						
69kV and Below						
I <sub>SC</sub> /I <sub>L</sub>	h < 11	11 ≤ h < 17	17 ≤ h < 23	23 ≤ h < 35	35 ≤ h	THD
<20	4.0	2.0	1.5	0.6	0.3	5.0
20 - 50	7.0	3.5	2.5	1.0	0.5	8.0
50 - 100	10.0	4.5	4.0	1.5	0.7	12.0
100 - 1000	12.0	5.5	5.0	2.0	1.0	15.0
> 1000	15.0	7.0	6.0	2.5	1.4	20.0

- 1 See Section 4 for explanations of the symbols.
- 2 The symbol "h" is for odd harmonics only.
- 3 Triplen harmonics are limited to 1/3 of the limits for odd-order harmonics.
- 4 All power generation equipment applications are limited to these values of current distortion regardless of the actual short circuit ratio I<sub>SC</sub>/I<sub>L</sub>.

Table 2.2 Harmonic Current Distortion Limits						
138kV						
I <sub>SC</sub> /I <sub>L</sub>	h < 11	11 ≤ h < 17	17 ≤ h < 23	23 ≤ h < 35	35 ≤ h	THD
<20 See note 4	2.0	1.0	0.75	0.3	0.15	2.5
20 - 50	3.5	1.75	1.25	0.5	0.25	4.0
50 - 100	5.0	2.25	2.0	1.25	0.35	6.0
100 - 1000	6.0	2.75	2.5	1.0	0.5	7.5
> 1000	7.5	3.5	3.0	1.25	0.7	10.0

<sup>•</sup> All of the information found in the notes below Table 2.1 also pertain to Table 2.2

# 2.2 HARMONIC VOLTAGE DISTORTION

ENMAX Power has the responsibility to supply voltage at the PCC that does not exceed the distortion limits listed in the table below.

Table 2.3 Harmonic Voltage Distortion Limits			
Bus Voltage at PCC (V <sub>n</sub> )	Voltage IHD (%)	Voltage THD (%)	
V <sub>n</sub> ≤ 69kV	3.0	5.0	
138kV	1.5	2.5	

The above information, as with all information found in this document, should be verified with ENMAX Power Corporation.

### 2.3 SHORT DURATION HARMONIC LIMITS

The harmonic limits listed in the tables in Sections 2.1 and 2.2 refer to steady state conditions. However, due to the time-varying nature of harmonics and certain facility operations, such as start-up, harmonics may exceed the limits given in the previously mentioned tables. The table below shows the acceptable limits for harmonic bursts.

Table 2.4 Short Duration Voltage and Current Harmonic Levels			
Acceptable Harmonic Distortion Levels (THD and IHD)	Maximum Duration of a Single Harmonic Burst in a 24 Hour Period (T <sub>maximum</sub> )	Total Duration of All Harmonic Bursts in a 24 Hour Period (T <sub>total</sub> )	
3.0 X Steady State Limit	1 sec. < T <sub>maximum</sub> < 5 sec	15 sec. < T <sub>total</sub> < 60 sec.	
2.0 X Steady State Limit	5 sec. < T <sub>maximum</sub> < 10 min.	60 sec. < T <sub>total</sub> < 40 min.	
1.5 X Steady State Limit	10 min. < T <sub>maximum</sub> < 30 min.	40 min. < T <sub>total</sub> < 120 min.	
1.0 X Steady State Limit	30 min. < T <sub>maximum</sub>	120 min. < T <sub>total</sub>	

• The limits mentioned in the table above are allowed only if the other customers are not adversely affected by the harmonic bursts.

### 2.4 EVALUATING CONCERNS FOR HARMONIC FILTERS AND POWER FACTOR CORRECTION

Power factor correction capacitors and harmonic filters at customer facilities may absorb harmonic currents from the system or magnify harmonic currents created by the customer load equipment. These installations should be coordinated with ENMAX Power.

It is not the purpose of these guidelines to penalize customers for harmonic currents that are absorbed from the power system. More detailed evaluation is necessary to assess the impact of a customer that is applying either harmonic filters or power factor correction capacitors.

Please note that the harmonic filters or power factor correction capacitors applied in customer facilities should be designed assuming background voltage distortion levels as specified in Table 2.3

# 2.5 FLICKER LIMITS FOR MOTOR STARTING AND CYCLICAL LOADS

The voltage flicker limits for customers connected to the ENMAX power system are shown in the figure below. In the case where there is a single customer on a transformer, the voltage fluctuations may not exceed the limits in Figure 2.1 on the utility side of the transformer. If there is more than one customer connected to a transformer, the voltage fluctuations may not exceed the limits found in Figure 2.1 on the customer side of the transformer.

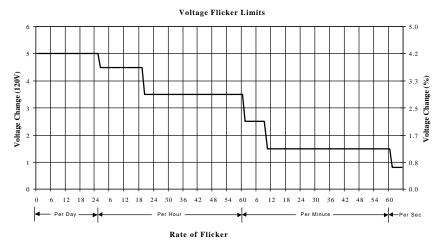


Figure 2.1Voltage Flicker Limits

### POWER QUALITY LIMITS

2.6 General Flicker Limits

### 2.6 GENERAL FLICKER LIMITS

Customers that have loads with random fluctuation characteristics will be evaluated according to the procedures in IEC 1000-4-15. The weighting curves for 60Hz, 120 volt systems will be used. A customer with fluctuating loads should not result in Pst value exceeding 1.0 at the 99% probability level recorded during an interval of at least one week.

### POWER QUALITY LIMITS

2.6 General Flicker Limits

COMMISSIONING PROCESS & GUIDELINES

3

.

# 3.0 CRITERIA FOR STAGED ACCEPTANCE OF NEW INSTALLATION

nly harmonic-producing customers are required to be evaluated under staged acceptance. The commissioning process for applying the Power Quality Specifications is a cooperative effort between the customer and the utility. Each party will provide the relevant information necessary to determine the impact on the power system. Refer to Figure 3.2 for the commissioning process and Figure 3.3 for the staged acceptance process.

### 3.1 STAGE 1 - AUTOMATIC ACCEPTANCE

Customers that have a small amount of harmonic load may be allowed to connect to the system without detailed evaluation. In order to be automatically accepted the customer must satisfy the following two criteria.

Criterion 1: The first requirement is that the customer shall satisfy

$$S_{Dw} / S_{SC} < 0.1\%$$

 $S_{Dw}$  is the amount of weighted disturbing load within the customer's facility and is calculated by using the following:

$$S_{\mathrm{Dw}} = \sum (SD_{i} \times W_{i})$$

Where:

 $S_{Di}$  = power rating for an individual disturbing load (kVA)

W<sub>i</sub> = weighting factor for the disturbing load (pu)

 $S_{SC}$  = actual three phase short capacity at the PCC

The weighting factors for various types of loads are given in Figure 3.1. If the type of load is unknown, a weighting factor of 1.0 should be used.

3.2 Stage 2 - Evaluation of Harmonic Emissions

Criterion 2: The second requirement is the customer's capacitors cannot cause a harmonic resonance.

The parallel resonant frequency, h<sub>r</sub>, only needs to be checked out for the two harmonic orders that are adjacent to h<sub>r</sub>. The following equation may be used to calculate h<sub>r</sub>, if all capacitors are connected to the same busbar.

$$h_{\Gamma} = \sqrt{(MVA_{SC})/(MVAR_{Cap})}$$

Since MVA<sub>sc</sub> and MVAR<sub>cap</sub> may change with loading, this criterion must satisfy all system conditions.

### 3.2 STAGE 2 - EVALUATION OF HARMONIC **EMISSIONS**

In order to be accepted at Stage 2, the customer must adhere to the ENMAX Power Harmonic Specification by performing a detailed harmonic analysis and submitting a report to ENMAX Power. If the harmonic distortion exceeds the limits in the specification, then the customer must install harmonic control equipment to remedy the situation.

#### 3.3 INFORMATION REQUIREMENTS

Table 3.1 Responsibilities to Supply Information		
Customer will supply the follow- ing information	A single line diagram, a list of linear load and nonlinear loads, a list of transformers, and a list of capacitors and filters	
ENMAX will supply information per- taining to	PCC location, fault current at PCC, and supply system impedance.	

3.4 Weighting Factors for Different Types of Harmonic Producing Loads

### 3.4 WEIGHTING FACTORS FOR DIFFERENT TYPES OF HARMONIC PRODUCING LOADS

The following figure shows various weighting factors.

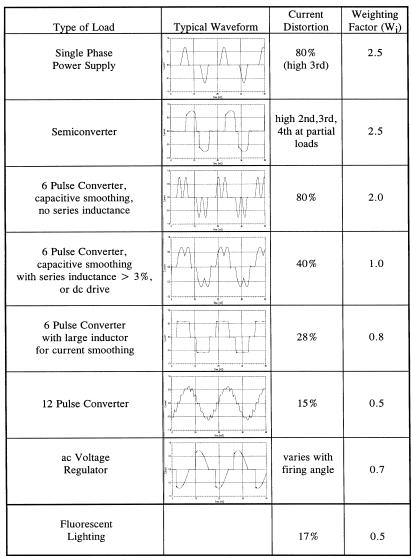


Figure 3.1 Weighting Factors

### 3.5 THE COMMISSIONING PROCESS

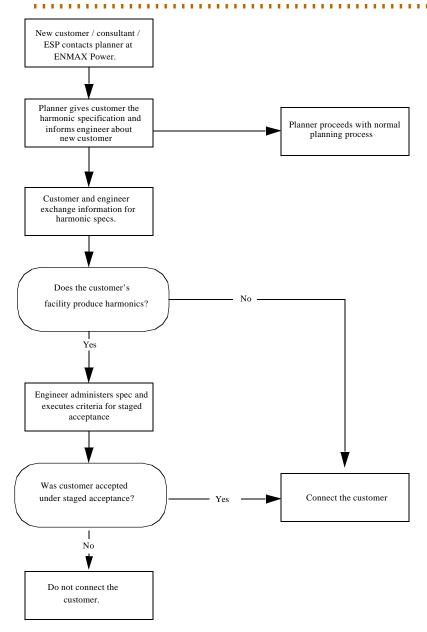


Figure 3.2 Commissioning Process

3.6 Staged Acceptance

### 3.6 STAGED ACCEPTANCE

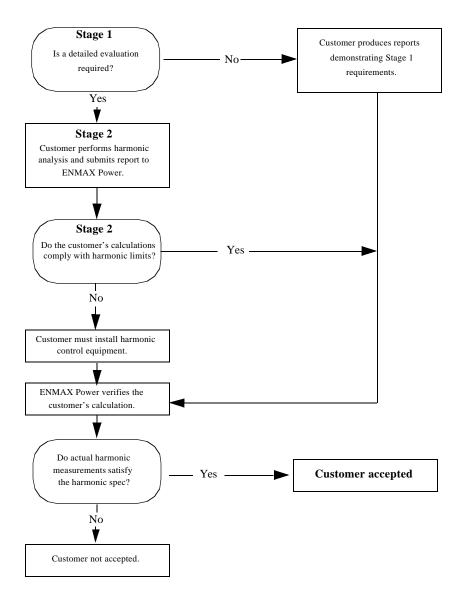


Figure 3.3 Staged Acceptance

### COMMISSIONING PROCESS & GUIDELINES

3.6 Staged Acceptance

SYMBOLS AND DEFINITIONS

•

### 4.1 SYMBOLS

 $h_{\Gamma} \qquad \text{Parallel resonant frequency as a multiple of the fundamental frequency.} \\ I_{h} \qquad \text{Magnitude of individual harmonic components (rms amps).} \\ I_{L} \qquad \text{Maximum demand load current (fundamental frequency component)} \\ \text{at PCC (rms amps). (Calculated as the average of the maximum monthly demand currents for the previous 12 months or estimated based on predicted load profiles.)} \\ I_{sc} \qquad \text{Actual system short circuit current at PCC under normal circumstances.} \\$ 

MVA<sub>SC</sub> System short circuit MVA at the capacitor bus.

 $MVAR_{cap}\ \ MVAR$  rating of capacitor bank.

 $P_{st}$  Short-term flicker assessed in a 10 minute interval.

V<sub>h</sub> Magnitude of individual harmonic components (rms

volts).

V<sub>n</sub> Nominal system rms voltage (rms volts).

#### 4.2 DEFINITIONS

Harmonic: A harmonic is a sinusoidal component of a periodic wave form having a frequency that is an integral multiple of the 60 Hz fundamental frequency. For example, the second, third, and fourth

order harmonics have frequencies of 120, 180, and 240 Hz respectively.

IHD: Individual harmonic distortion (IHD) is the magnitude of distortion

at each individual harmonic. The IHD can be expressed in both voltage and current as a percentage of the fundamental component.

PCC: Point of common coupling (PCC) is the location on the ENMAX power system that is electrically closest to the specified customer and

is common to other ENMAX customers.

THD: Total harmonic distortion (THD)

Voltage: THD=  $\frac{\sqrt{\sum_{h=2}^{50} V_h^2}}{V_n} \times (100 \text{percent})$ 

Current:  $THD = \frac{\sqrt{\sum_{h=2}^{50} I_h^2}}{I_{I_L}} \times (100 \text{percent})$ 

REFERENCES

•

1. Allard, G. et al, "New Hydro-Quebec Guide for Limiting Harmonic Current Emissions at the Distribution Level: Principles and Applications." CEA Distribution Planning Conference #16, 1996.

- 2. "Guide and Requirements for Harmonic Control for Customers Supplied at a Voltage Level from 69kV to 287 kV." British Columbia Hydro, June 1994.
- "Guide for Applying Harmonic Limits on Power Systems," IEEE Std 519a/D5, May 1996.
- 4. Nesbitt, R., "City of Calgary Electric System Standard for Voltage Flicker," ENMAX Power Corporation, October 1989.
- "Recommended Practices and Requirements for Harmonic Control in Electrical Power Systems," IEEE Std 519-1992, April 1996.